


Technicolor CGA437 laitteen siltaaminen

1. Kirjaudu laitteen hallintaan osoitteessa <https://192.168.0.1>. Tunnukset löytyvät laitteessa olevasta tarrasta (Username/Password)
2. Valitse "Connection" -> "Modem mode" -> valitse "Bridge mode" ja lopuksi "Save"

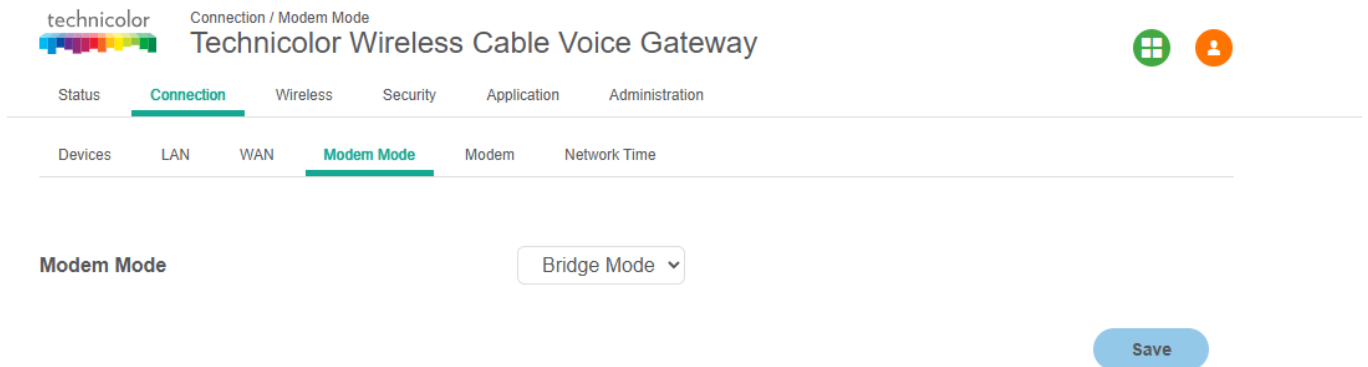

The screenshot shows the web interface of a Technicolor CGA437 gateway. At the top, the Technicolor logo is on the left, and the text "Connection / Modem Mode" and "Technicolor Wireless Cable Voice Gateway" are in the center. On the right, there are two circular icons: a green one with a white grid and an orange one with a white person silhouette. Below the header, there is a navigation bar with tabs: "Status", "Connection" (highlighted in green), "Wireless", "Security", "Application", and "Administration". Under the "Connection" tab, there is a sub-navigation bar with tabs: "Devices", "LAN", "WAN", "Modem Mode" (highlighted in green), "Modem", and "Network Time". The main content area shows "Modem Mode" on the left and a dropdown menu on the right that currently displays "Bridge Mode" with a downward arrow. At the bottom right, there is a blue "Save" button.