

## Arris TG2482 siltaaminen

Käynnistä web-selain, osoitteessa <http://192.168.0.1> Kirjautu sisään -sivu tulee näkyviin.

**Huom:** Oletusarvoisesti LAN IP-osoite on 192.168.0.1. Jos oletus-osoite on muuttunut, Anna mukautettu osoite osoite-ruutuun.

### 2. Kirjautumissivulla:

- Kirjoita admin käyttäjätunnus -kenttään.
- Kirjoita salasana salasana -kenttään. (oletus on laitteen sivussa olevassa tarrassa oleva PSK avain)
- Valitse Kirjautu sisään -painiketta. Basic setup -sivu tulee näkyviin.

The screenshot shows the 'System Basic Setup' page of the Arris TG2482 router. The top navigation bar includes 'ARRIS', 'Wireless', 'HSD', and 'Logout'. Below this, a secondary navigation bar has 'Basic Setup', 'WAN Setup', 'LAN Setup', 'Wireless Setup', 'Firewall', and 'Utilities'. The 'Basic Setup' section is active and contains a 'BASIC SETUP' sub-section. The main content area is titled 'System Basic Setup' and includes a descriptive paragraph. Below this, there are three main configuration sections: 'Basic Setup', 'Security Settings(WPA/WPA2 PSK)', and 'WPS Settings'. Each section contains various fields, checkboxes, and dropdown menus, with question mark icons for help. An 'Apply' button is located at the bottom of the page.

Section	Field	Value	Help
Basic Setup	Host Name	ARRISGW	?
	Enable Wireless	<input checked="" type="checkbox"/>	?
	Wireless Network Name (SSID)	ARRIS-FF52	?
	Broadcast Network Name (SSID)	<input checked="" type="checkbox"/>	?
	User Name	admin	?
	Change Password	Change Password	?
	Tx Power Level	High	?
	Channel	Auto	?
	Language	English	?
	Security Mode	WPA2-PSK	?
Security Settings(WPA/WPA2 PSK)	Encryption Algorithm	AES	?
	Pre-Shared Key	B7C43158DCAEF80F	?
WPS Settings	WPS Enable	<input checked="" type="checkbox"/>	?
	Device PIN Code	87625035	?
	Encryption Mode	PBC	?
	Enrollee PIN Code		?
	Start WPS Association	<input type="button" value="Start WPS Association"/>	?

Valitse LAN Setup välilehti ylävalikosta. **LAN Setup** -sivu tulee näkyviin.

4. **LAN Setup** -sivulla määrittele seuraavasti:
  - a. **NAT Mode** - Valitse valikosta "Bridged".
  - b. Napsauta **Apply** -painiketta.

## LAN Settings

You can make changes to the Local Area Network (LAN) here. For changes to take effect, you must press the 'Apply' button at the bottom of the screen.

---

### LAN IP Settings

IP Address	<input type="text" value="192.168.0.1"/>	?
Subnet Mask	<input type="text" value="255.255.255.0"/>	?
VLANID	<input type="text"/>	?

### DHCP Server Settings

Enable DHCP Server	<input checked="" type="checkbox"/>	?
Start IP Address	<input type="text" value="192.168.0.2"/>	?
End IP Address	<input type="text" value="192.168.0.254"/>	?
Lease Time	<input type="text" value="3600"/>	?
Domain Name	<input type="text"/>	?

### DNS Override

Enable DNS Override	<input type="checkbox"/>	?
Primary DNS Server IP	<input type="text" value="0.0.0.0"/>	?
Secondary DNS Server IP	<input type="text" value="0.0.0.0"/>	?

### DNSRelay

Enable DNS Relay	<input type="checkbox"/>	?
------------------	--------------------------	---

### NAT

NAT Mode	<input type="text" value="Bridged"/>	?
----------	--------------------------------------	---

### UPnP

Enable UPnP	<input checked="" type="checkbox"/>	?
-------------	-------------------------------------	---

1. Valitse **OK**, kun avautuu ikkuna: **Restarting your router is recommended when NAT settings change.** The TG2482 will now restart.